



Notice

Please read this manual carefully before using the equipment.

Caution

To avoid violating the warranty and to minimize the chances of getting electrically shocked, please do not disassemble the device on your own accord. The device must not be tampered with and must not be changed in any way. There are no user–serviceable parts inside the device. For repairs and maintenance inquiries, please contact an authorized Hesai Technologies service personnel.

Disclaimer

The information contained within this user's manual and the functions offered are intended to provide information about the product. All reasonable efforts have been made to ensure the accuracy of the information. However, Hesai cannot be held responsible for any errors. Hesai does not warrant the accuracy and reserves the right to make changes to the catalog and its functions at any time without notice.

Contents

1	Safety Notice		4	Instrument Operation	
1.1	Body Safety	01	4.1	Charging Battery	12–13
1.2	Laser Safety	02	4.2	Battery Installation	14–15
1.3	Battery and Charge Safety	03	4.3	Bluetooth Connection	16
1.4	Usage Safety	04	4.4	Operational Steps	17–18
1.5	Storage and Transportation Safety	04	4.5	Detection Do's and Don'ts	19–20
1.6	Intrinsic Safety	04			
1.7	Bluetooth Information	04	5	Technical Support and	
2	Introduction			Maintenance	
_	111100101011		5.1	Error Messages	21
2.1	Working Principle	05	5.2	Trouble Shooting	22
2.2	Specifications	06	5.3	Warranty and Maintenance	23
2.3	Package Components	07			
3	Interface Operation			oendix I Statement	24
3.1	Buttons	08			
3.2	Light Instructions and Display	09–10	Apı	oendix II	
3.3	Setting Menus	11	EU D	eclaration of Conformity	25–26

1 Safety Notice

Prior to using this product, please read the safety notices carefully to ensure the safety and to avoid any improper usage.

1.1 Body Safety

- 1) Do not use the instrument if the outer body is broken or wet.
- 2) Please stop using the instrument instantly and pull out the battery in case of smoke, strange smell, short, or fire.
- 3) The enclosure level of the instrument is IP54. Please stop using the instrument and pull out the battery if any liquids have gotten inside.
- 4) Do not look at laser apertures while using the instrument.
- 5) Do not fix the instrument without the permission from Hesai.
- 6) Do not touch the LCD when it is broken.

NOTE

- 1) Any damage of anodizing layer of the heat sink of middle shell or sight base occurs, the product should be no longer used in hazardous area.
- 2) The instrument satisfies the requirements of:
 - IEC 60079-0:2017
 - IEC 60079-11:2011
 - IEC 60079-28:2015

FCC ID: 2ASO2HS4000

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device contains FCC ID: A8TBM71S2.

1.2 Laser Safety

Be sure to observe the following points:

Avoid direct eye exposure. The alignment laser might harm your eyes. Do not point the alignment laser at people when the product is powered on. Do not allow children to handle the product.



Infrared Measurement Laser: Class 1, wavelength: 1651 nm, <10 mW. Green Alignment Laser: Class 3R, wavelength: 520 nm, <5 mW.


NOTE Please avoid direct eye exposure

The output of Green Alignment Laser has an Aperture Label on the display. Class 3R are indicated on the label attached to the left side of the product.

The device satisfies the requirements of:

- IEC/EN 60825-1: 2014;
- Complies with 21 CFR 1040.10 and 1040.11 except for conformance with IEC 60825-1 Ed.3., as described in Laser Notice No.56, dated May 8, 2019.







1.3 Battery and Charger Safety

- 1) Do not use the non-original batteries and chargers.
- 2) Do not charge the battery if the charger or the battery is broken.
- 3) Please keep surrounding environments safe when charging.
- 4) Please keep the charger and battery clean to avoid short.
- 5) Please stop charging instantly and unplug the plug when there is short, fire, strange smell, or smoke.
- 6) Do not dismantle, modify or repair the battery.
- 7) Please store the battery in a cool and dry environment. Do not place the battery in a place with too high or too low temperature.
- 8) Do not store or transport the battery together with metal objects.
- 9) Do not touch the battery with wet hands.
- 10) Do not hit or throw the battery.
- 11) If the battery leaks contact with the skin or clothes, be sure to rinse with clean water. Please seek medical attention if necessary.
- 12) Do not store the device with the battery installed when not using the device for a long time.
- 13) Do not change the battery in explosive atmospheres.
- 14) Use charger type HS4000-C only.
- 15) Do not charge the battery pack in explosive atmospheres.
- 16) Do not dispose of the battery pack in the fire.
- 17) Never attempt to disassemble the battery pack.
- 18) Do not short-circuit the terminals of the battery pack.
- 19) Do not take off the battery package in explosive atmosphere.

1.4 Usage Safety

Operating Temperature: -20 to +45°C; Operating Humidity: <80%RH, Non-condensing.

- 1) Please avoid electromagnetic interference when using the product.
- 2) Do not forcefully push the buttons or subject the device to strong shocks.
- 3) Please use the strap when using the device to avoid breakage and foot injury caused by dropping of the device.

1.5 Storage and Transportation Safety

- 1) Please store the product in a cool and dry environment.
- 2) Please transport the product with a dedicated case to avoid strong shocks or vibration.

1.6 Intrinsic Safety

Type of Protection: Ex ib op is IIA T3 Gb

(Il 2 G Ex ib op is IIA T3 Gb

IECEx Certificate Number: IECEx NEP 19.0004X. ATEX Certificate Number: Baseefa19ATEX0021X.

1.7 Bluetooth Information

Operating Frequency: 2400~2483.5 MHz

Max RF TX Power: 1.2 mW

2 Introduction

HS4000SR is an ultralight and highly sensitive instrument that utilizes infrared laser to remotely detect methane leaks. HS4000SR comes with Bluetooth capability that can transfer measurement data in real-time to the dedicated APP. Users can use the APP to check, record and export the data. Through the APP, users can generate detection reports using the saved data as well.

2.1 Working Principle

HS4000SR emits an infrared laser at 1.65 um. The laser beam travels to the target, is partially absorbed by the gas, then reflected all the way back into the receiver.

The reflected laser is collected and converted to an electrical signal that carries information needed to deduce the relative methane concentration. The reading is expressed by a methane column density (ppm*m). It is the integral of the methane concentration (ppm) and the distance (m) on the optical path.

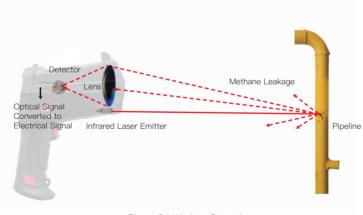


Figure 2.1 Working Principle

2.2 Specifications

Target Gas	Methane (CH4) and methane-containing gases	Display	2.8 Inch LCD
Working Principle	Tunable Diode Laser Absorption Spectroscopy (TDLAS)	Enclosure Level	IP54
Measurement Method	Laser Reflection	Explosion Proof Classification	Ex ib op is IIA T3 Gb
Sensitivity	5 ppm*m@100 ms (Actual)	Laser Classes	Infrared Laser: Class 1 Green Alignment Laser: Class 3R Avoid direct eye exposure
Detection Range (CH4)	0 to 99999 ppm*m	Operating Temperature	-20 to +45℃
Measurement Accuracy	±10% (100 to 50000 ppm*m)	Operating Humidity	<80%RH, Non-condensing
Detection Distance	60 m@75%reflectivity, 100 ms mode (Actual distance may vary due to background type and conditions)	Storage Temperature	−20 to +60°C
Unit	ppm*m/vol%*m/%LEL*m	Power Supply	Rechargeable Lithium battery pack Nominal Voltage: 7.2 V, HS4000-B
Response Time	5 ms, 10 ms, 100 ms (configurable)	Operating Time	Continuous operating time: 15 hours (Typical value, ambient temperature 25°C, 2 batteries)
Weight	0.71 kg	Self-Test	Built-in self-test while turning on the instrument, 10 s (typical value)
Size	160 mm*210 mm*80 mm	Threshold Alarm	Threshold: Can be set by users Alarm: Buzz with LCD turning red
Data Transmission	Bluetooth, Dedicated APP	System False Alarm	Corresponding error message while there is any hardware issue

2.3 Package Components



Figure 2.2 Package Components

No.	Components	Quantity	Remark
01	Handheld Remote Methane Leak Detector	1	_
02	Lens Cap	1	_
03	Battery Pack (HS4000-B)	2	Can be equipped with additional batteries
04	Power Adapter	1	-
05	Charging Base (HS4000-C)	1	-
06	Carrying Case	1	-

Table 2.2 Package Components Description

3 Interface Operation

3.1 Buttons





Figure 3.1 Device Buttons

No.	Button	Descriptions
01	Power/Return Button	Hold the power button about 3 seconds to open the device
02	Enter Button	Enter the menu/Confirm
03	Up Button	Move up the cursor
04	Down Button	Move down the cursor
05	Test Button	Click once to start testing and click again to stop testing
06	Battery Compartment Button	Used to remove the battery

Table 3.1 Device Buttons Description

3.2 Light Instructions and Display

3.2.1 Light Instructions



Figure 3.2 Light Instructions

No.	Name	Notes
а	Infrared Laser Emitter	_
b	Alignment Laser (Green)	Class 3R, Avoid Direct Eye Exposure The indication light will start to blink when the device starts detecting
С	Working Light (Blue)	The blue working light will turn on when there is an infrared laser emission
d	Receiving Lens	-

Table 3.2 Light Instructions

3.2.2 Interface Display

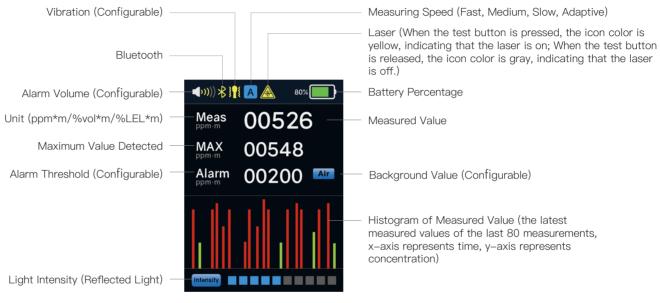


Figure 3.3 User Interface

Note: Vibration and adaptive features are only included in hardware version V5.0 or later.

NOTE Please measure when the light intensity signal is between 4 to 10 grids to avoid the measurement error caused by too weak or too strong light intensity.

3.3 Setting Menus

3.3.1 Menus and Default Settings

Please click the enter button to enter the menus. Through the Setting menus, users can set the alarm threshold value, air background, unit, measured speed and vibration. Also Users can set alarm sound, screen brightness, standby time, interface language through the System Settings menu and view system software and hardware versions through the About menu.



Figure 3.4 Menus

Name	Default Setting
Alarm Threshold	200 ppm*m
Offset	0 ppm*m
Unit	ppm*m (Options: ppm*m/%vol*m/%LEL*m)
Measuring Speed	Fast (Options: Fast 0.1 s; Medium 0.4 s; Slow 1.6 s; Adaptive)
Vibration	ON
Alarm Volume	ON, volume 100% (Options: ON/OFF)
Brightness	100%
Power Save	3 Min (Options: 3 Min/10 Min/30 Min/60 Min/120 Min/Never)
Language	English (Options: Chinese/English/French/Spanish)
About	Hardware Version; Firmware Version; Device Serial NO; Bluetooth Address

Table 3.3 Menu Default Settings

3.3.2 Changing Settings

Use /

Up/Down button to select the item or adjust the value.

Use



Power button to return.

Jse \

Enter button to enter the submenu or confirm the setting.

4 Instrument Operation

Before the operation, please read all instructions carefully in this manual.

4.1 Charging Battery

4.1.1 Charging Method

- 1) Connect the power adapter cord to the charging base.
- 2) Insert the battery into the charging base.
- 3) Plug the power adapter into a power outlet.
- 4) Unplug the adapter and remove the battery when charging is complete.





Figure 4.1 Charging Diagram

4.1.2 Charging Notes



Figure 4.2 Charging Indicator Light

- 1) There are two lights on the battery charging base. One is the fault indicator light, the other is the charging indicator light.
- 2) If the fault indicator light is on, stop charging immediately, unplug the charger, and contact us for maintenance.
- 3) The charging indicator lights up during charging and turns off when the battery is fully charged.
- 4) When the adapter is plugged in but the battery is missing from the charging base, the charge indicator light will blink.

4.2 Battery Installation

4.2.1 Insert Battery



Figure 4.3 Insert Battery Steps

NOTE Please ensure surrounding environments are safe.

4.2.2 Remove Battery



NOTE Please ensure surrounding environments are safe.

4.3 Bluetooth Connection

4.3.1 Functions

HS4000SR uses Bluetooth for communication tool. By connecting the detector with the App, users can:

- 1) Check real-time data.
- 2) Take pictures of a leakage point and show the corresponding N/E position.
- 3) Show GPS location on the map.
- 4) Record and export measurement data.
- 5) Generate measurement reports (can be shared via WeChat, QQ or E-mail).

NOTE Please contact Hesai to obtain the App.

4.3.2 How to connect using Bluetooth:


- 1) Turn on Bluetooth on the mobile phone and search for the nearby Remote Methane Leak Detector.
- 2) The Bluetooth icon on the top of the device screen will turn green to indicate successful connection.
- 3) Use your app to read, record, and export data.




Figure 4.5 Bluetooth connected icon

4.4 Operational Steps

4.4.1 Start to Use

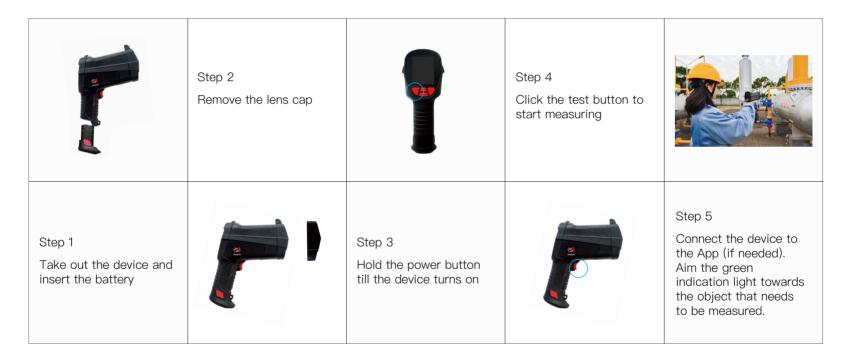

4.4.2 After Use

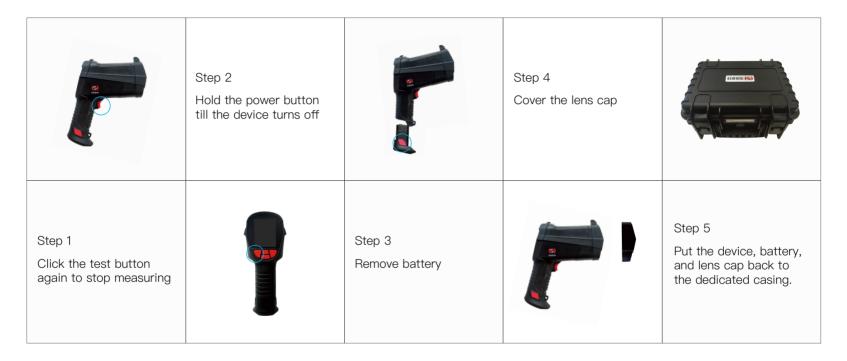

NOTE

- 1) Please store the instrument in a cool and dry environment. Do not place the instrument in a place with too high or too low temperature.
- 2) If there is dust on the lens or body of the instrument, please wipe with a dry clean cloth or with a little water. Do not use rough paper (such as a napkin) to clean the lens to avoid damages to the lens coating.
- 3) Please ensure surrounding environments are safe when removing the battery (step 3).

4.5 Detection Do's and Don'ts

4.5.1 Case 1

When detecting through the glass, if the infrared laser is incident on the glass vertically, part of the light reflected by the glass will be received by the device, which will cause light intensity saturation or inaccurate measurement result.

In such case, please point as shown in Figure 4.6.B to avoid receiving the glass reflected light.



Figure 4.6 Do's and Don'ts when detecting through the glass

4.5.2 Case 2

Please avoid detecting through materials that have strong absorption or reflection effect on the infrared laser, such as PMMA, laminated glass, anti–infrared glass. In such case, the methane concentration behind can't be detected or the measurement result may be inaccurate.

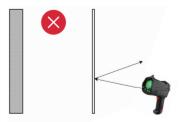


Figure 4.7 Avoid detecting through anti-infrared or absorbing infrared material

4.5.3 Case 3

When detecting towards the corner (or similar situation), as shown in Figure 4.8.A, the infrared laser may reflect between walls, resulting in high measurement concentration. In such case, please point as shown in Figure 4.8.B to have the accurate measurement result.

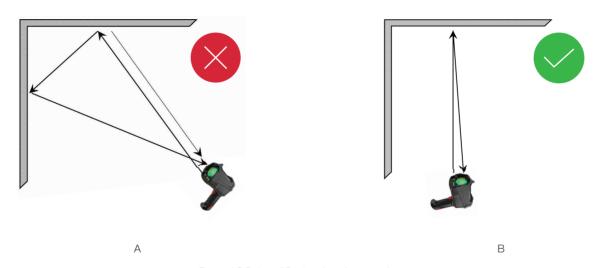


Figure 4.8 Do's and Don'ts when detecting the corner

5 Technical Support and Maintenance

5.1 Error Messages

5.1.1 Error Code

Error Code	Code Description	
0x01	Laser temperature control system is abnormal	
0x02/0x03	Laser intensity in the reference channel is too weak	
0x04/0x05	Circuit board temperature exceeds the range of -20 to +80°C	
0x08/0x09 Laser shell temperature exceeds the range of -20 to +60°C		
0x10/0x11 Unable to detect the absorption signal in the reference channel		

Table 5.1 Error Code Explanations



Figure 5.1 Error Messages

5.1.2 Proper Handling Method

When the error message appears, try restarting the device. If the error still exists, please contact Hesai for the technical support.

NOTE Do not try to repair the device on your own accord.

5.2 Trouble Shooting

1) The instrument cannot be turned on.

Please reinstall the battery, wait 5 seconds, then press the power button to turn on the instrument. If the instrument still cannot turn on within 30 seconds, please check whether it is out of battery.

2) The instrument's alarm is always on or never on.

Please check whether the alarm threshold value is set too high or too low.

3) The instrument's alarm is on, but there is no sound.

Please check the volume of the instrument. Make sure that the alarm is on and the volume is set properly.

4) The battery cannot be charged.

Please check whether all the components are connected well.

Please check whether the charging base has power.

Please check whether the battery is plugged into the charging base.

5) The instrument is in good condition but there is no reading.

Please check whether the light intensity is too strong or too low.

When light intensity is too strong, please avoid complete perpendicular between the detecting laser beam and the object reflective surface.

5.3 Warranty and Maintenance

5.3.1 Warranty

During the warranty period, Hesai will provide free maintenance service when the device can't operate due to the problem of software or hardware. But Hesai will not provide the service if the problem is caused by improper or unauthorized operations. Situations that break the warranty include but are not limited to the following:

- 1) Missing warranty document or effective purchase vouchers.
- 2) Did not use the instrument as per these instructions.
- 3) Unauthorized modification, disassembly, or repair.
- 4) Intentional damages.
- 5) Stolen, lost or discarded device.
- 6) Damaged device due to use with unauthorized accessories and services.
- 7) Those damages caused by natural disasters, such as fire, lightning, flood, earthquake, etc.

5.3.2 Maintenance

For maintenance requirement, please follow the following steps:

- 1) Report the problem to Hesai for the preliminary problem diagnose and receive Return Material Authorization (RMA).
- 2) Delivery product to Hesai.
- 3) Hesai provides the maintenance test report, maintenance fee (if any), and repair agreement.
- 4) Pay the maintenance fee if needed.
- 5) Receive the repaired instrument and finish delivery inspection.

Normal Maintenance Time (after receiving the product): 7 days.

The specific maintenance time shall be determined according to actual repairs or service needed.

Appendix I FCC Statement

FCC ID: 2ASO2HS4000

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- · Increase the separation between the equipment and receiver.
- · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- · Consult the dealer or an experienced radio/TV technician for help.

NOTE Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

Appendix II EU Declaration of Conformity



EU Declaration	on of Conformity
Equipment Name: Handheld Remote Methane Leak Detector	
Equipment Model: HS4000SR	
Serial Number:	
Manufacturer:	
Hesai Technology Co., Ltd.	
Address:	
No.2 Building, No.468 Xinlai Road, Jiading District, Shanghai, China	
This declaration of conformity is issued under the sole responsibility of	of the manufacturer
This declaration relates to the and related variations as described in	Group II Category 2G
the certificate, coded:	Ex ib op is IIA T3 Gb
The object of the declaration described above is in conformity with	2014/30/EU
the relevant Union harmonisation legislation	2014/34/EU
E/KING A	2014/53/EU
S建立CC	2012/19/EU
THE STATE OF THE S	2011/65/EU last amended by (EU)2015/863
	EC No 1907/2006 and its subsequent amendment
Harmonised Standards:	EN 60079-0:2018
	EN 60079-11:2012
	EN 60079-28:2015
Other Standards and Specifications used:	EN 61010-1:2010
	EN 301 489-1 V2.1.1:2017



EN 300 328 V2.1.1:2016 EN 62479:2010 EN 61326-1:2013 IEC/EN 60825-1:2014 Notified Body SGS Fimko Oy (Number: 0598) performed EU-Type examination in accordance with Annex III of the directive and issued the certificate (Baseefa19ATEX0021X) Notified Body Certification Management Limited B.V. (Number: 2776) performed Comformity to type based on quality assurance of the production process in accordance with Annex IV of the directive and issued QA Notification document (CML ATEXQ12120) Signed for and on behalf of: (Place and date of issue): (Name, function) (signature) (Manufacturer) No.2 Building, No.468 Xinlai Road, Jiading District, Shanghai, China Jinyu Li, Certification Manager Hesai Technology Co., Ltd. 10 Dec 2020

Hesai Technology Co., Ltd.

Phone: 400-805-1233

Website: www.hesaitech.com

Address: Building L2, Hongqiao World Centre, Shanghai, China

Business Email: info@hesaitech.com Service Email: service@hesaitech.com



HESAI WeChat